




SANYO

**SANYO
CASSETTE TAPE DECK
RD4600_{UM}
SERVICE MANUAL**



SCHEMATIC DIAGRAM

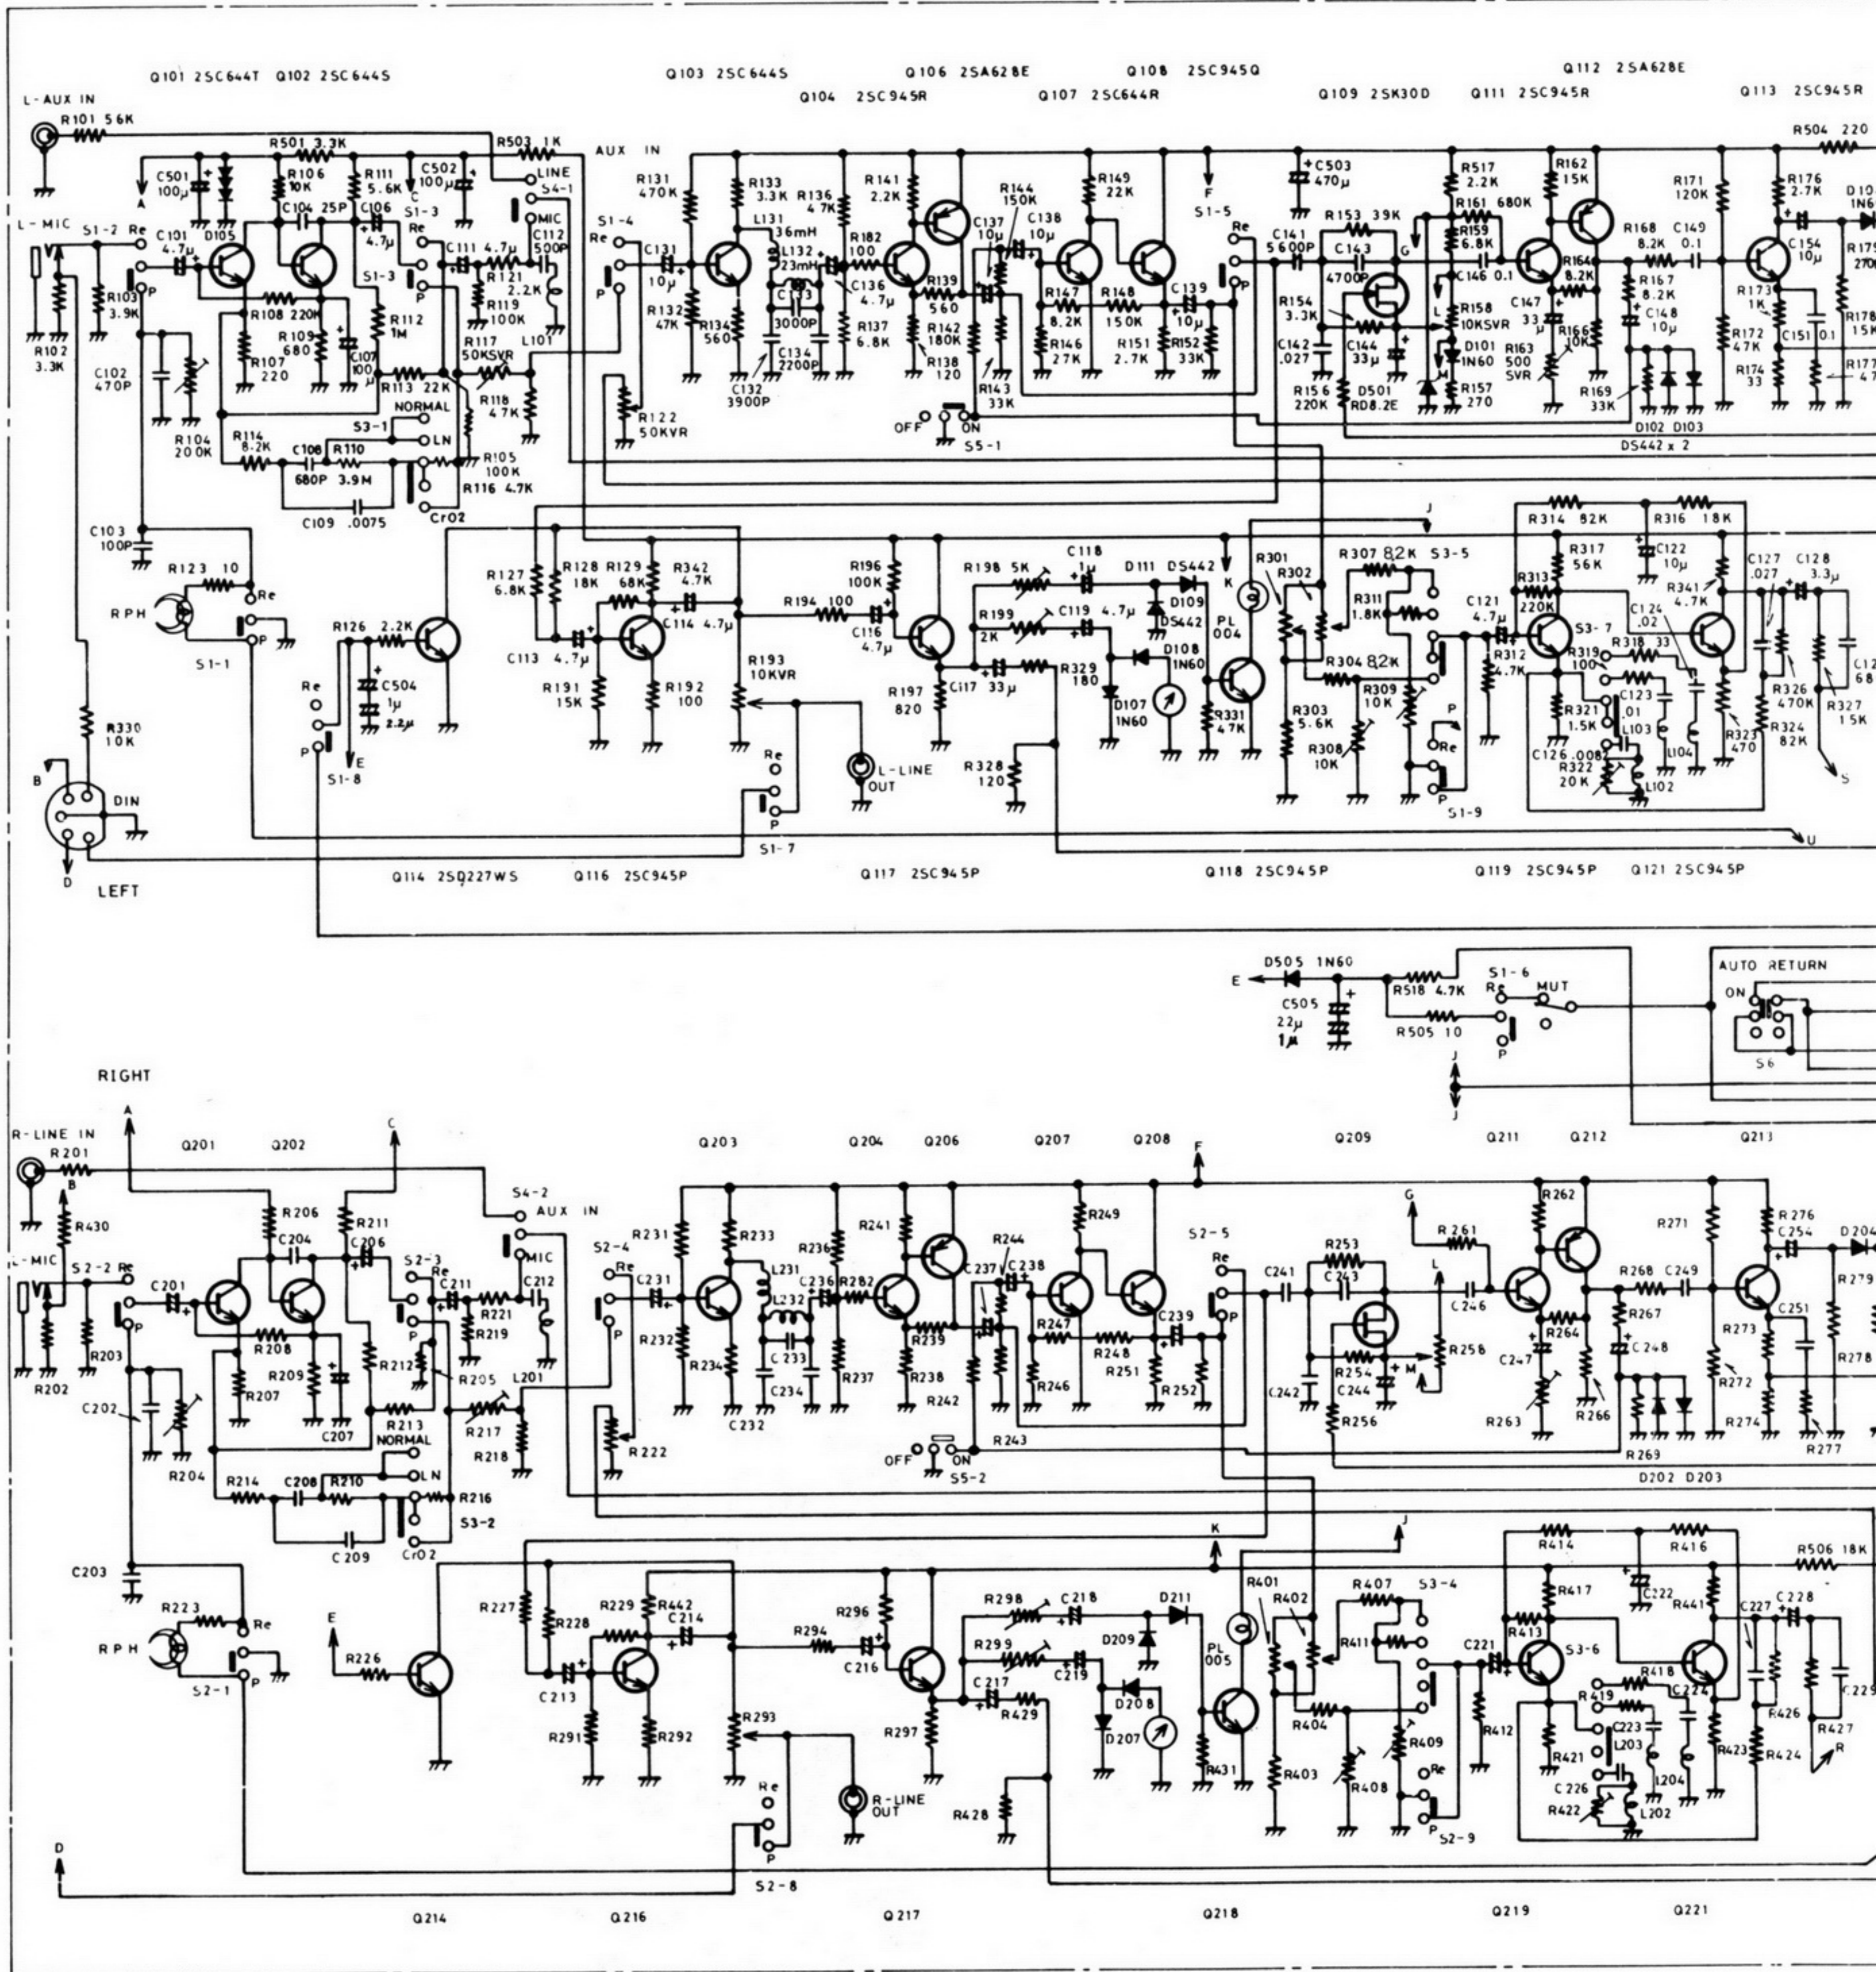

- S1 RECORD-PLAY SWITCH
- S2 RECORD-PLAY SWITCH
- S3 TAPE SELECT SWITCH
- S4 RECORD MODE SWITCH
- S5 DOLBY SWITCH
- S6 AUTO RETURN SWITCH
- S7 DOLBY CALIBRATION OSC SWITCH

Subject to change without notice.

