

W27 und W28 entfällt


Rundfunkgerät

S2


	1	2
I		
II	•	
III	•	•

S1

Schalter	37	39	41	43	45	47	51
Vorlauf	•	•	•				
Halt							•
Rücklauf				•	•		

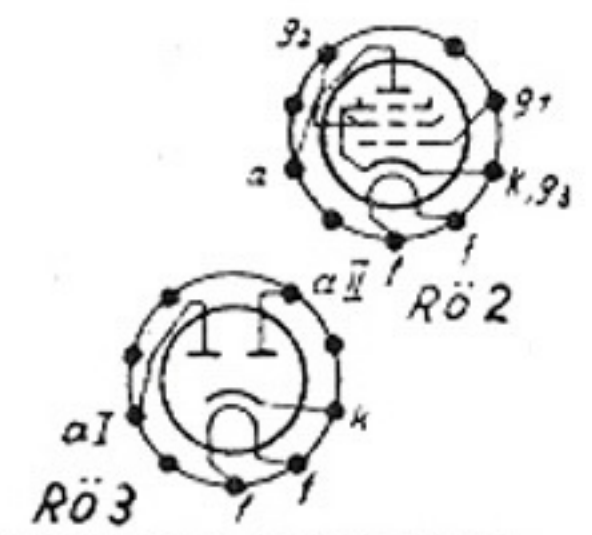

Schalter	Feder	27	26	1	37	29	4	33	23	20	21	14	16	18	7	5	35	9	11
	Kontakt	28	25	2	32	30	3	34	24	19	22	13	15	17	8	6	36	10	12
Aus				•	•		•												
Aufnahme	TA	•	•	•	•														
	Rundfunk	•	•	•	•														
	Mikrofon	•	•	•	•														
Wiedergabe		•	•	•	•														

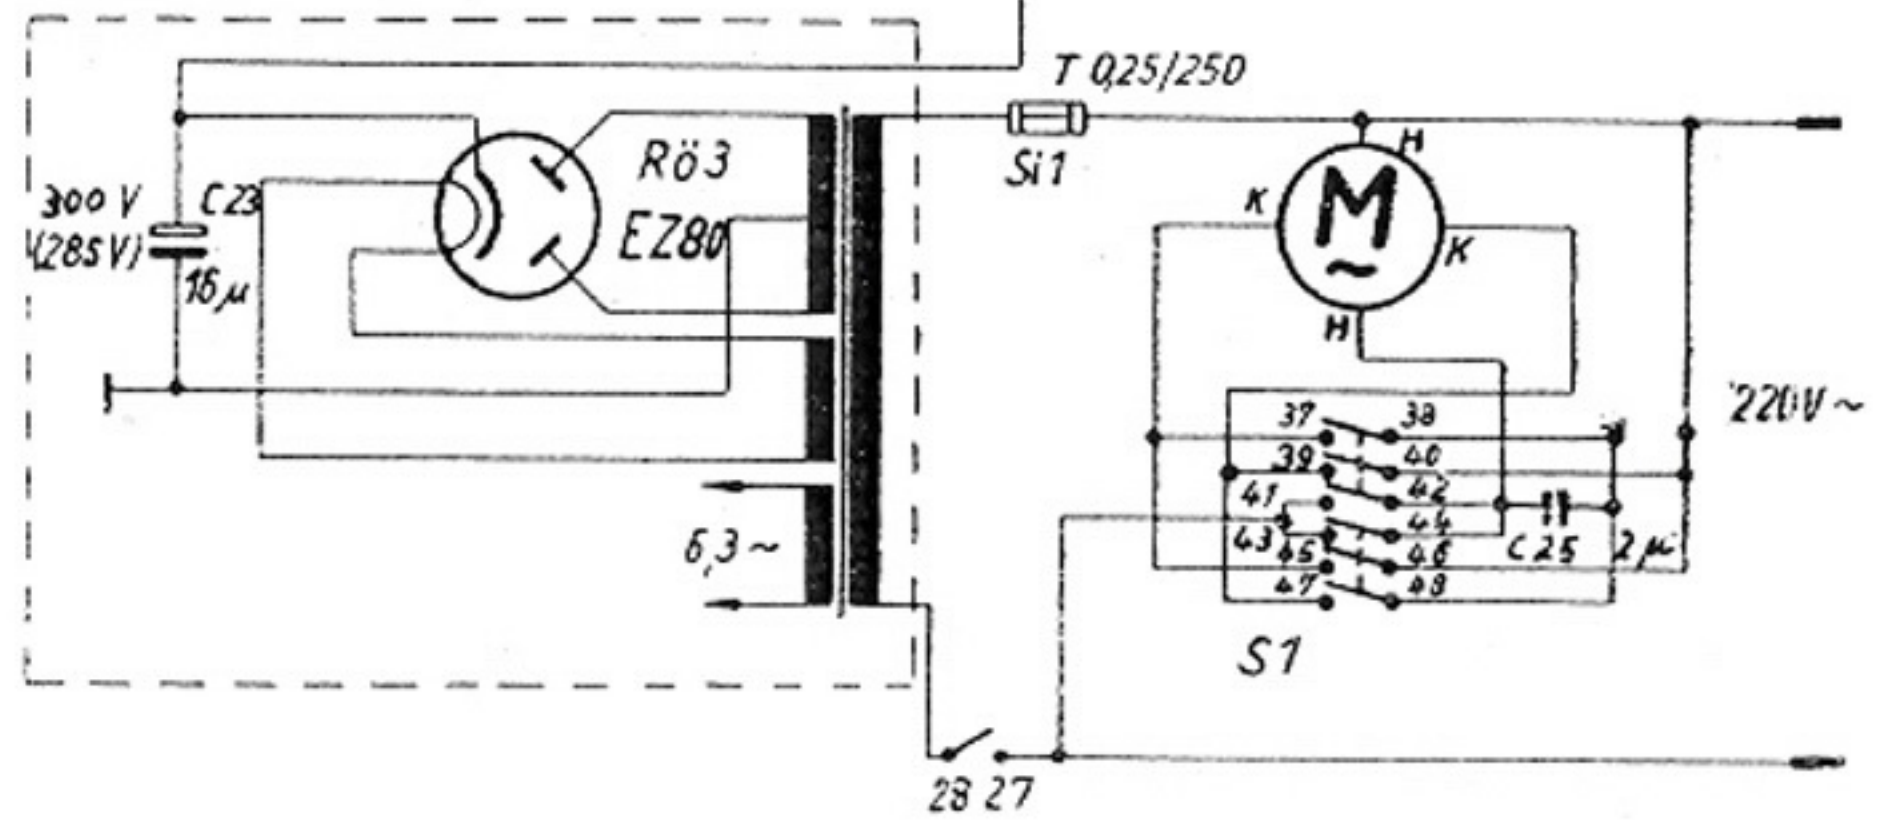

( ) Spannung bei Aufnahme gemessen mit Instrument 1000r/v