


Demodulator




Bandfilter


Ansicht von vorn links

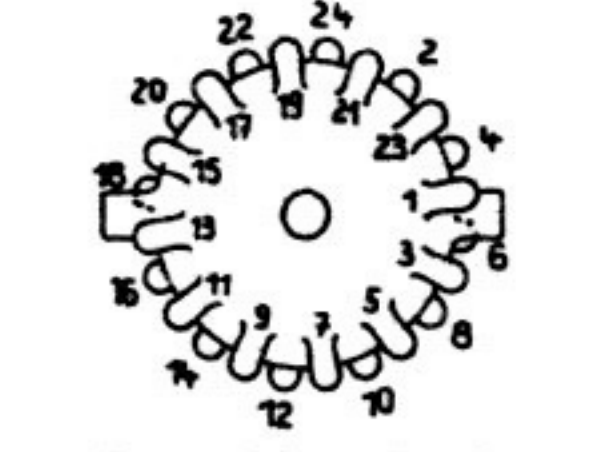

Schaltpaket

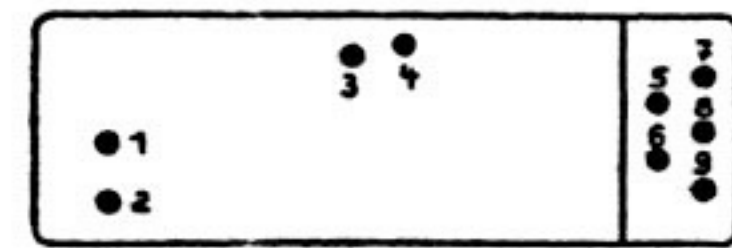

UKW-Vorkreis

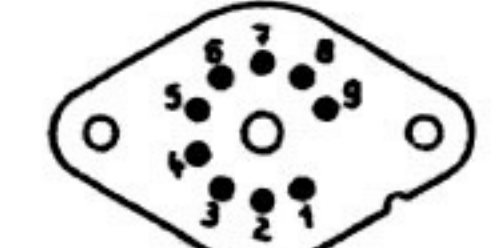


Röhren u. Stecker-Fassung

Ansichten auf Lötösen

- Netz — A
- JL — B
- BEL — C
- TA — D
- TB — E
- FA — F
- LW — G
- MW — H
- KW — J
- UKW — K

		9	10	11	13	19	20
A	gedrückt	●	●	●	●	●	●
A	nicht gedrückt	○	○	○	○	○	○
Nr. 319	gedrückt	●	●	●	●	●	●
B, G	nicht gedrückt	○	○	○	○	○	○
Nr. 314	gedrückt	●	●	●	●	●	●
D, E	nicht gedrückt	○	○	○	○	○	○

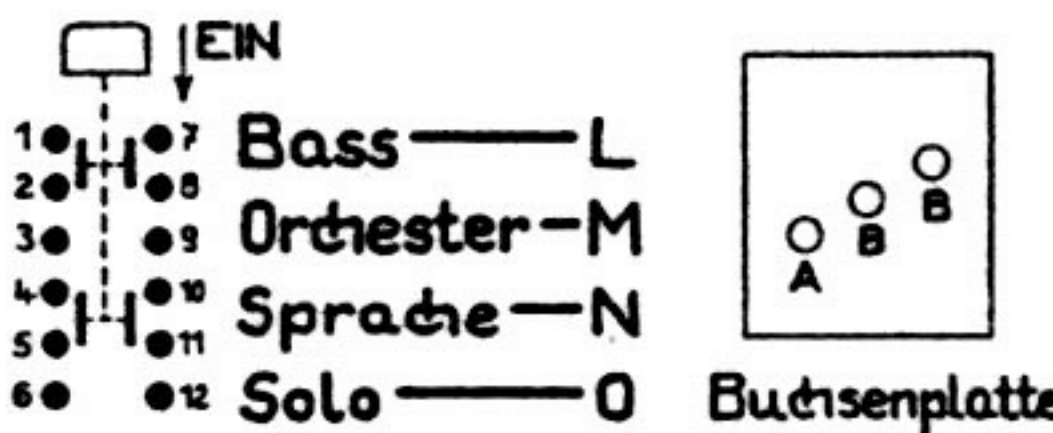

Schaltstellung-UKW-Orchester

		1	3	4	6	8	9	10	11	12	14	15	17	19	20	21	22	23	24
Nr. 320	gedrückt	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
F	nicht gedrückt	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Nr. 321	gedrückt	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
G, M, J	nicht gedrückt	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Nr. 322	gedrückt	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
K, K'	nicht gedrückt	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

Alle Spannungen gemessen gegen Chassis bei Schalterstellung UKW. Instrument 1000Ω/V = Änderungen, insbesondere solche, die durch den technischen Fortschritt bedingt sind, vorbehalten.

Zwischenfrequenz  
AM = 460 kHz  
FM = 10,7 MHz

**REMA 8000**  
10 AM/13 FM-Kreis-Super